

HWH AIR LEVELING AND ACTIVE AIR MANIFOLDS

QUICK REFERENCE GUIDE

The following is a numeric list of manifolds. Commonly replaced components are listed in columns beneath the **REPAIR PARTS** heading. CLICK on the number indicated in the **PAGE #** column to see a diagram of the manifold and a listing of its replaceable components.

EXISTING MANIFOLD		REPAIR PARTS			PAGE #
NUMBER	DESCRIPTION *	MANIFOLD	AIR VALVE	PRESSURE SWITCH	
AP1460	3 VALVE MANIFOLD	RAP1460	RAP1940 (3)		MR05.2500
AP1461	6 VALVE MANIFOLD	RAP1461	RAP1940 (6)		MR05.2700
AP1506	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP1506	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3325
AP1875	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP1875	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3375
AP2066	3 VALVE MANIFOLD	RAP2066	RAP1940 (3)		MR05.2600
AP2133	6 VALVE MANIFOLD	RAP2133	RAP1940 (6)		MR05.2900
AP5598	3 VALVE MANIFOLD	RAP5598	RAP6059 (3)		MR05.2000
AP6007	3 VALVE MANIFOLD	RAP6007	RAP6059 (3)		MR05.2000
AP6008	3 VALVE MANIFOLD	RAP6008	RAP6059 (3)		MR05.2000
AP6009	3 VALVE MANIFOLD	RAP6009	RAP6059 (3)		MR05.2000
AP6393	3 VALVE MANIFOLD	RAP1460	RAP1940 (3)		MR05.2500
AP6394	6 VALVE MANIFOLD	RAP1461	RAP1940 (6)		MR05.2700
AP8398	6 VALVE MANIFOLD	RAP2133	RAP1940 (6)		MR05.2900
AP8399	3 VALVE MANIFOLD	RAP2066	RAP1940 (3)		MR05.2600
AP9278	6 VALVE MANIFOLD 1 - 85 PSI PRESS. SW.	RAP9278	RAP1940 (6)	RAP90570 - 85 PSI	MR05.3300
AP9283	6 VALVE MANIFOLD 2 - 10 PSI PRESS. SW.	RAP9283	RAP1940 (6)	PRESSURE SWITCHES BY FORETRAVEL	MR05.3000
AP10487	6 VALVE MANIFOLD	RAP10487	RAP1940 (6)		MR05.2800
AP11239	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP90086	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3400
AP11240	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP90087	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3350
AP11585	6 VALVE MANIFOLD 2 - 35 PSI PRESS. SW.	RAP90581	RAP1940 (6)	RAP90580 - 35 PSI	MR05.3500
AP14168	6 VALVE MANIFOLD 1 - 85 PSI PRESS. SW.	RAP9278	RAP1940 (6)	RAP90570 - 85 PSI	MR05.3300
AP14560	6 VALVE MANIFOLD 1 - 100 PSI PRESS. SW.	RAP90573	RAP1940 (6)	RAP90388 - 100 PSI	MR05.3305
AP15554	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP90394	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3600
AP15602	6 VALVE MANIFOLD - B 1 - 100 PSI PRESS. SW.	RAP90389	RAP1940 (6)	RAP90388 - 100 PSI	MR05.3302
AP15603	6 VALVE MANIFOLD - B	RAP90392	RAP1940 (6)		MR05.2920

* - B indicates the manifold has a manual travel by-pass

MR02.0000
22JAN08

HWH AIR LEVELING AND ACTIVE AIR MANIFOLDS

QUICK REFERENCE GUIDE

EXISTING MANIFOLD		REPAIR PARTS			PAGE #
NUMBER	DESCRIPTION *	MANIFOLD	AIR VALVE	PRESSURE SWITCH	
AP16635	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP90576	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3650
AP16636	6 VALVE MANIFOLD - B 1 - 100 PSI PRESS. SW.	RAP90574	RAP1940 (6)	RAP90388 - 100 PSI	MR05.3310
AP16848	4 VALVE MANIFOLD	RAP90578	RAP1940 (4)		MR05.3900
AP16864	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP90577	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3700
AP17485	6 VALVE MANIFOLD 1 - 85 PSI PRESS. SW.	RAP90572	RAP1940 (6)	RAP90570 - 85 PSI	MR05.3295
AP18657	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP90575	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3320
AP18658	6 VALVE MANIFOLD 1 - 85 PSI PRESS. SW.	RAP90571	RAP1940 (6)	RAP90570 - 85 PSI	MR05.3290
AP19985	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP90662	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3610
AP19986	6 VALVE MANIFOLD - B 1 - 100 PSI PRESS. SW.	RAP90674	RAP1940 (6)	RAP90388 - 100 PSI	MR05.3304
AP23327	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92150	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3710
AP24553	6 VALVE MANIFOLD 2 - 10 PSI PRESS. SW.	RAP92151	RAP1940 (6)	RAP92144 - 10 PSI	MR05.3711
AP25184	6 VALVE MANIFOLD 2 - 35 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92152	RAP90989 (6)	RAP90580 - 35 PSI RAP90570 - 85 PSI	MR05.3712
AP25410	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP90990	RAP1940 (4) RAP90989 (2)	RAP1720 - 20 PSI	MR05.3701
AP25451	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92153	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3713
AP25452	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92154	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3714
AP25473	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP91134	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3703
AP25507	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92121	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3715
AP25508	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92122	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3716
AP26195	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92155	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3717
AP26552	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP91133	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3312
AP26553	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP91132	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3706
AP28527	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92156	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3718
AP28528	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP92157	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3719

* - B indicates the manifold has a manual travel by-pass

MR02.0001
22JAN08

HWH AIR LEVELING AND ACTIVE AIR MANIFOLDS

QUICK REFERENCE GUIDE

EXISTING MANIFOLD		REPAIR PARTS			PAGE #
NUMBER	DESCRIPTION *	MANIFOLD	AIR VALVE	PRESSURE SWITCH	
AP28925	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92158	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3720
AP28926	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92159	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3721
AP30116	8 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92160	RAP1940 (4) RAP90989 (4)	RAP1720 - 20 PSI	MR05.4202
AP30284	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91122	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3722
AP30285	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP91121	RAP1940 (6)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.3723
AP30503	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP91135	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3709
AP30879	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP91634	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3601
AP30880	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP91638	RAP1940 (6)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.3602
AP31932	7 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92161	RAP1940 (4) RAP90989 (2) RAP92145 (1)	RAP1720 - 20 PSI	MR05.4300
AP31935	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP92162	RAP1940 (2) RAP90989 (2) RAP92147 (2)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.4301
AP31954	4 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92163	RAP1940 (2) RAP90989 (2)	RAP1720 - 20 PSI	MR05.3905
AP32798	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91583	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3724
AP32799	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP91584	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3725
AP32990	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92164	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3726
AP33329	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP92165	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3727
AP33337	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP92166	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3728
AP33338	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92167	RAP1940 (6)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.3729
AP34962	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91648	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3607
AP34963	4 VALVE MANIFOLD	RAP91647	RAP1940 (4)		MR05.3901
AP35017	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91629	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3603
AP35018	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP91630	RAP1940 (6)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.3604
AP35019	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91631	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3605

* - B indicates the manifold has a manual travel by-pass

MR02.0002
22JAN08

HWH AIR LEVELING AND ACTIVE AIR MANIFOLDS

QUICK REFERENCE GUIDE

EXISTING MANIFOLD		REPAIR PARTS			PAGE #
NUMBER	DESCRIPTION *	MANIFOLD	AIR VALVE	PRESSURE SWITCH	
AP35020	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP91632	RAP1940 (6)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.3606
AP35021	8 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW.	RAP91633	RAP1940 (4) RAP90989 (4)	RAP1720 - 20 PSI	MR05.4200
AP35032	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW. 1 - 85 PSI PRESS. SW.	RAP92168	RAP1940 (2) RAP90989 (2) RAP92147 (2)	RAP1720 - 20 PSI RAP90570 - 85 PSI	MR05.4320
AP35974	6 VALVE MANIFOLD - B 2 - 20 PSI PRESS. SW. 1 - 100 PSI PRESS. SW.	RAP92169	RAP1940 (6)	RAP1720 - 20 PSI RAP90388 - 100 PSI	MR05.3730
AP36620	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92123	RAP1940 (4) RAP90989 (2)	RAP1720 - 20 PSI	MR05.4350
AP36968	4 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92170	RAP1940 (2) RAP90989 (2)	RAP1720 - 20 PSI	MR05.3907
AP36994	4 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RAP92171	RAP1940 (2) RAP90989 (2)	RAP1720 - 20 PSI	MR05.3910
AP39844	7 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RAP92172	RAP1940 (4) RAP90989 (2) RAP92145 (1)	RP92146 PRESS. TRANSDUCER	MR05.4600
AP39952	4 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RAP92173	RAP1940 (2) RAP90989 (2)	RP92146 PRESS. TRANSDUCER	MR05.4500
AP39953	6 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RAP92174	RAP1940 (2) RAP90989 (2) RAP92147 (2)	RP92146 PRESS. TRANSDUCER	MR05.4550
AP42172	6 VALVE MANIFOLD 2 - 20 PSI PRESS. SW.	RX92269	RAP1940 (6)	RAP1720 - 20 PSI	MR05.3731
AP42495	7 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RX92270	RAP1940 (4) RAP90989 (2) RAP92145 (1)	RP92146 PRESS. TRANSDUCER	MR05.4601
AP42496	6 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RX92271	RAP1940 (2) RAP90989 (2) RAP92147 (2)	RP92146 PRESS. TRANSDUCER	MR05.4551
AP42498	4 VALVE MANIFOLD ACTIVE AIR 2 PRESS. TRANSDUCERS	RX92272	RAP1940 (2) RAP90989 (2)	RP92146 PRESS. TRANSDUCER	MR05.4501

* - B indicates the manifold has a manual travel by-pass

MR02.0003
04JUN08