

9000# Jack Kit and Spacer/Cross-Tie Kit: Straight-Acting Jacks


Application: Mounting Straight-Acting Jacks on the REAR OF FORD, 2004 thru 2006 chassis with 19.5-22.5" TIRES.

Mfr. #: AP34440 9000# Rear Jack Kit
Includes: 2 - AP34595 Jack 9000x15 AMR WS
 1 - AP35038 Hardware Kit 7/16"
 4 - P34599 Spacer - 1.00"

Mfr. #: 1 - AP34446 Spacer/Tie Kit 9S FD/WH
Includes: 1 - AP34540 CrossTie - AMWH/9SR
 1 - AP35038 Hardware Kit 7/16"
 4 - P35041 Spacer - 1.00"

M.S.R.P.: See Item Price Listing

M.S.R.P.: See Item Price Listing

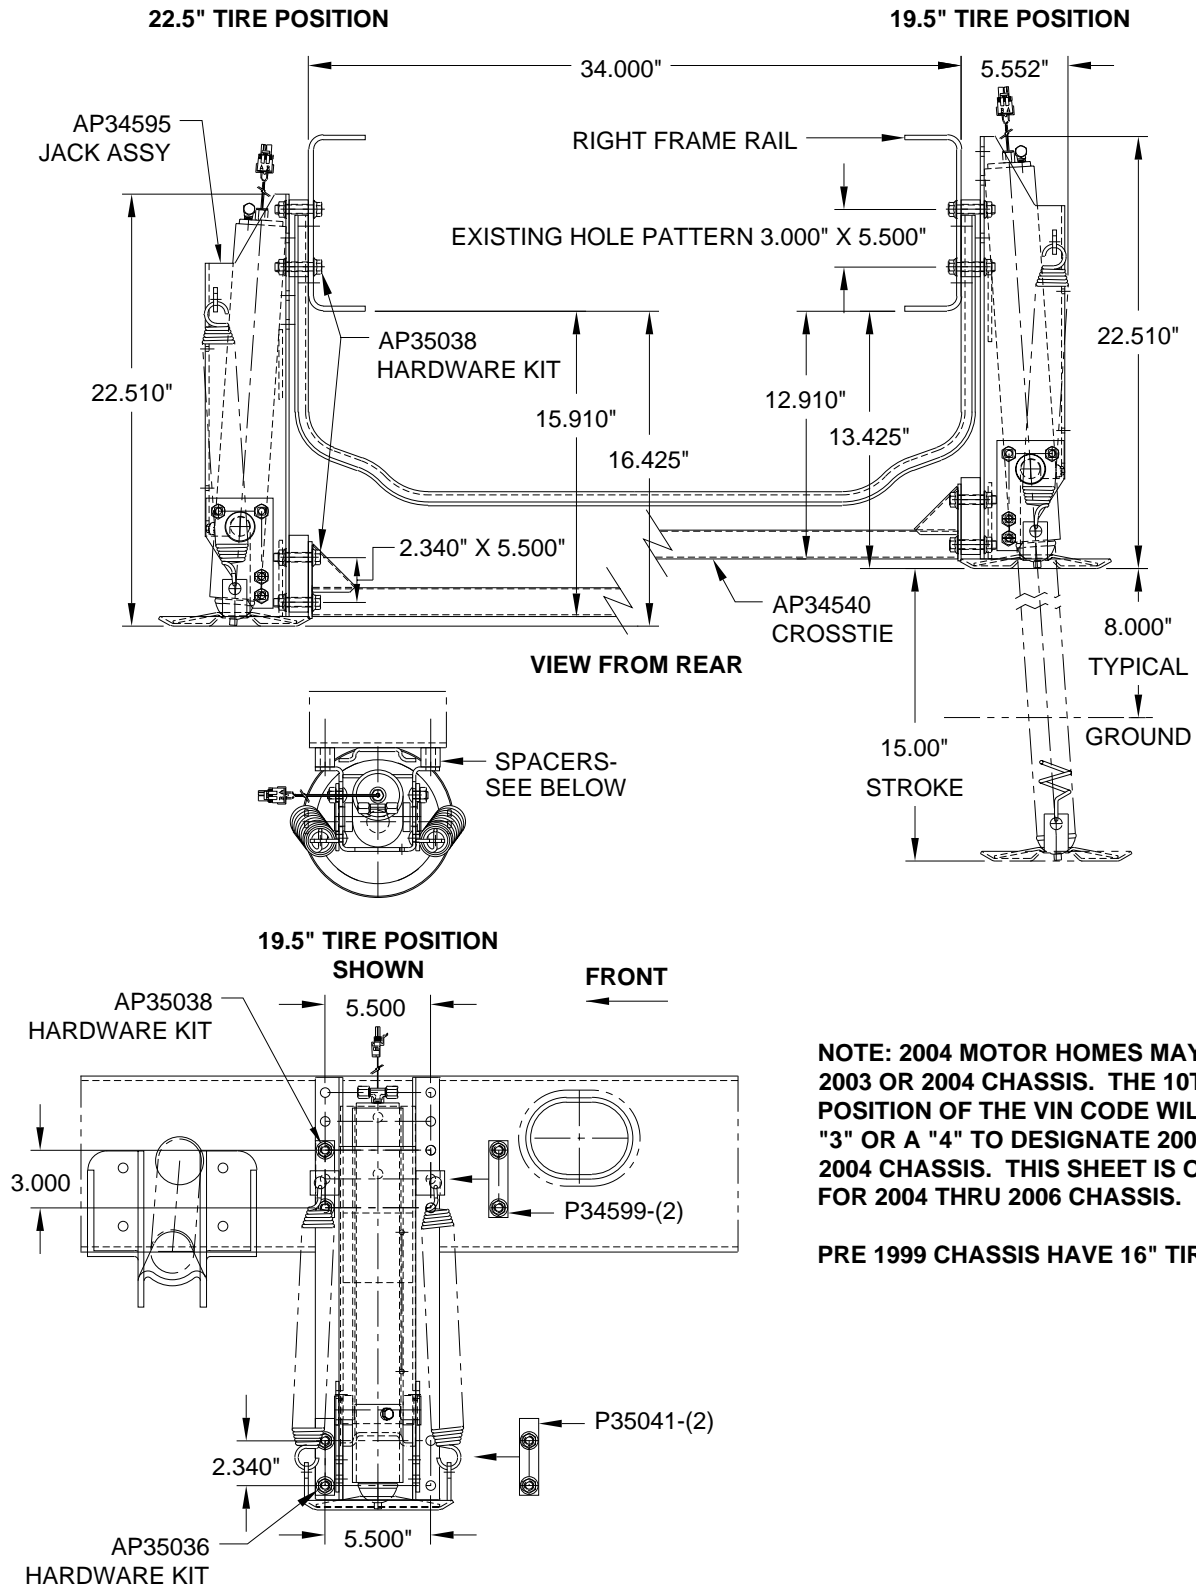

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1072
04AUG05