



# 6000# Jack Kit: Straight-Acting Jacks

**Application:** For rear of 2008 and later Dodge Sprinter 3500 chassis with the V6 engine.

**Mfr. #:** AP43393 6000# Jack Kit

- Includes:** 1 - AP41999 6000# x 13" Stroke Left Jack Assy.  
 1 - AP41998 6000# x 13" Stroke Right Jack Assy.  
 1 - AP43391 U-Bolt Hardware Kit

**M.S.R.P.:** See Item Price Listing

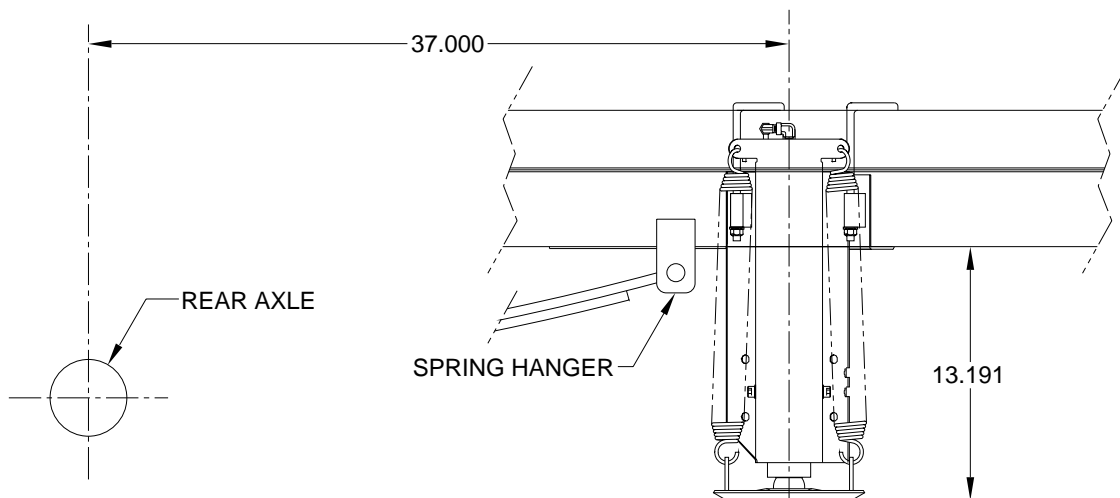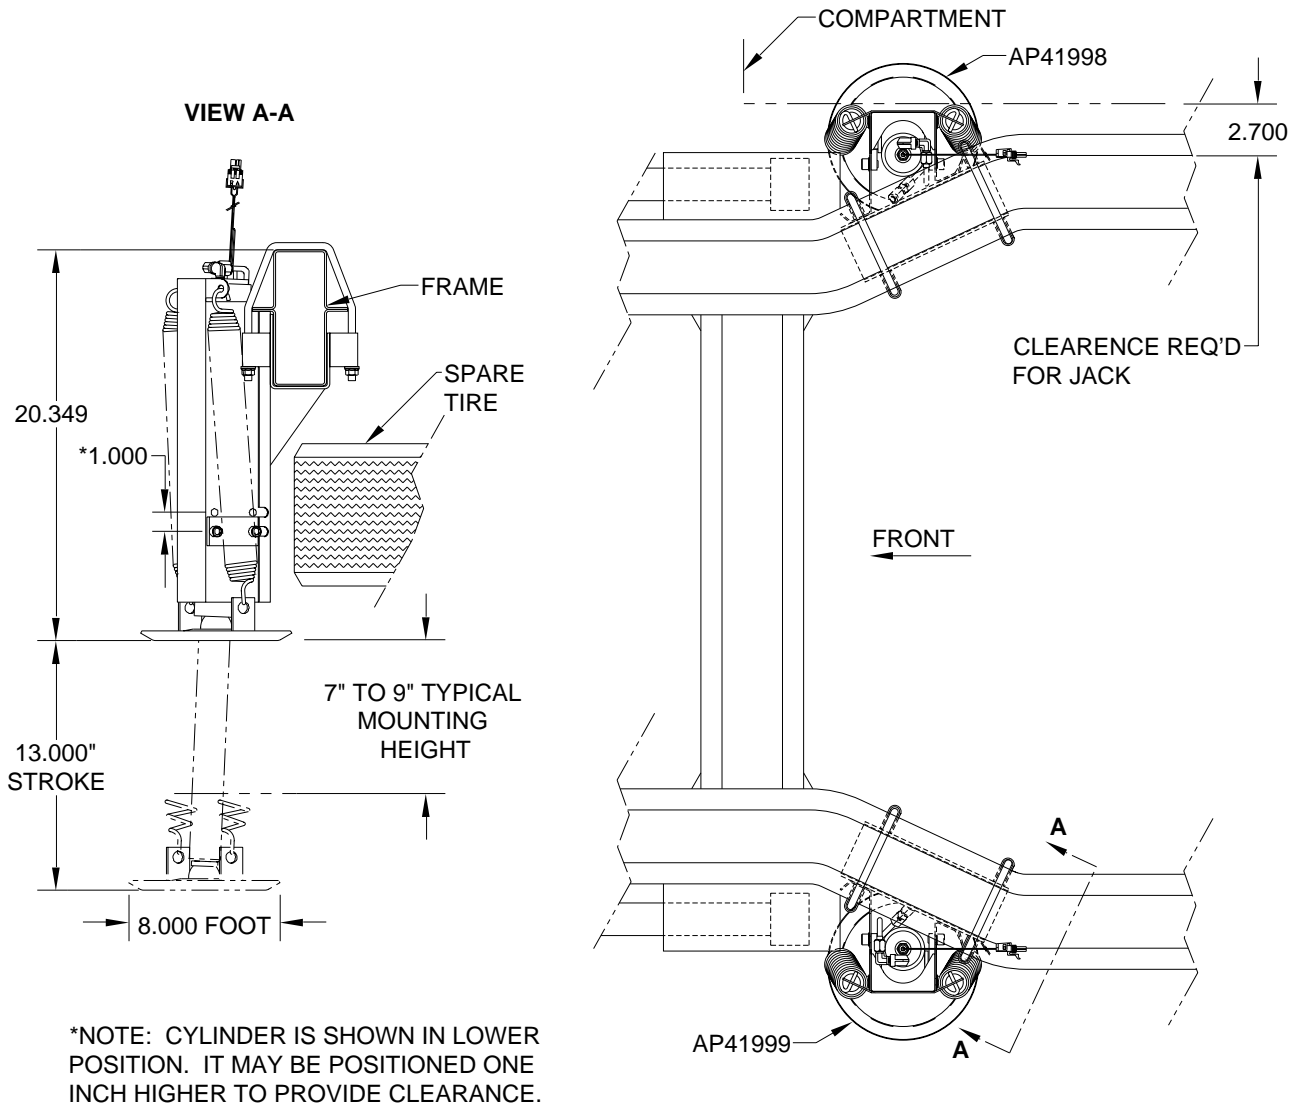

NOTE: ALL DIMENSIONS ARE APPROXIMATE

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1079  
13NOV08