


Adapter Bracket Kit: Kick-Down Jacks

Application: For mounting Kick-Down Jacks on the REAR OF FLEETWOODS. Use only behind the rear axle. Adapter bracket.


Mfr. #: AP10556 Fleetwood Adapter Bracket Kit

Includes: 1- AP10655 Bracket Assembly Left Hand
 1- AP10656 Bracket Assembly Right Hand
 1 - P10654 Angle
 1 - AP10557 Hardware Kit

M.S.R.P.: See Item Price Listing

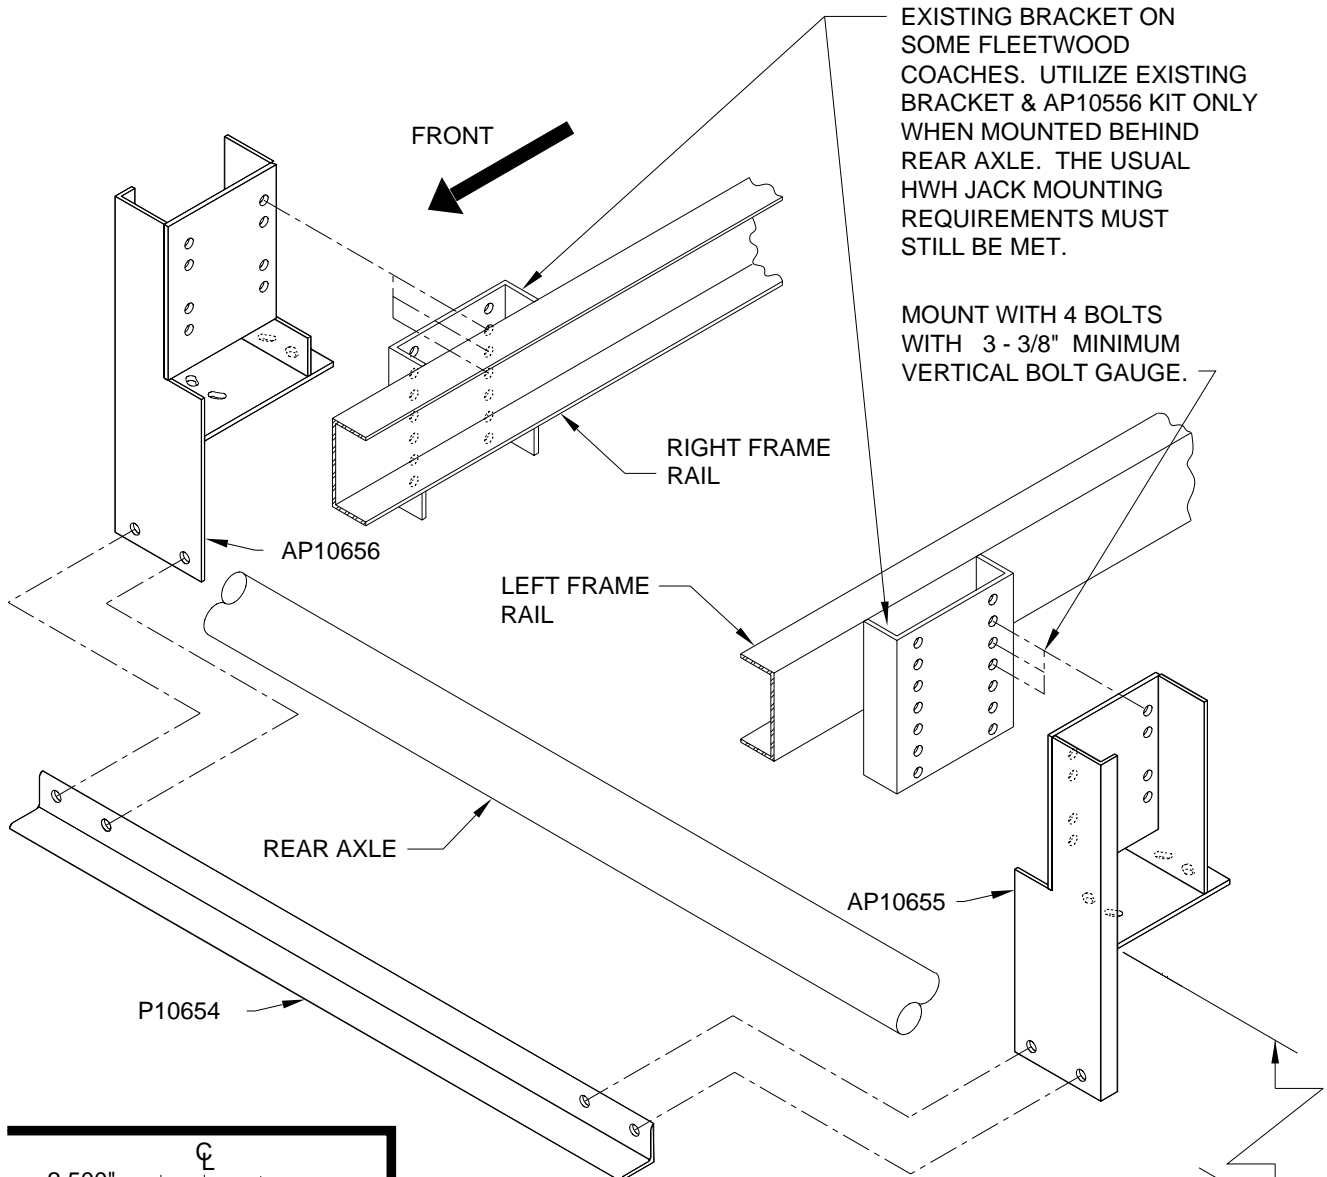

CHECK RECOMMENDED MOUNTING HEIGHT OF JACK BEING USED.

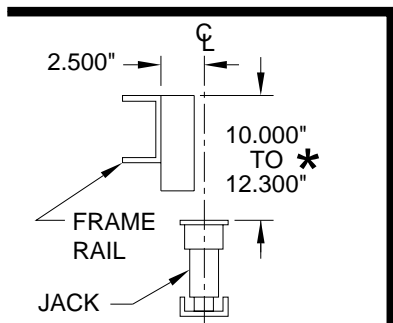

* DIMENSION FROM TOP OF RAIL TO TOP OF JACK

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.1195
 11JAN01