

4000# Jack Kit: Straight-Acting Jacks

Application: For rear of Dodge Sprinter 2500 Chassis.

Mfr. #: AP37942 4000# Jack Kit


Includes: 2 - AP39573 4000# x 13" Stroke Jack Assy.
1 - AP37950 Hardware Kit

Mfr. #: AP37943 Crosstie Kit

Includes: 1 - AP37863 Upper Crosstie
1 - AP37867 Lower Crosstie
1 - AP37949 Hardware Kit
1 - AP37950 Hardware Kit

M.S.R.P.: See Item Price Listing

M.S.R.P.: See Item Price Listing

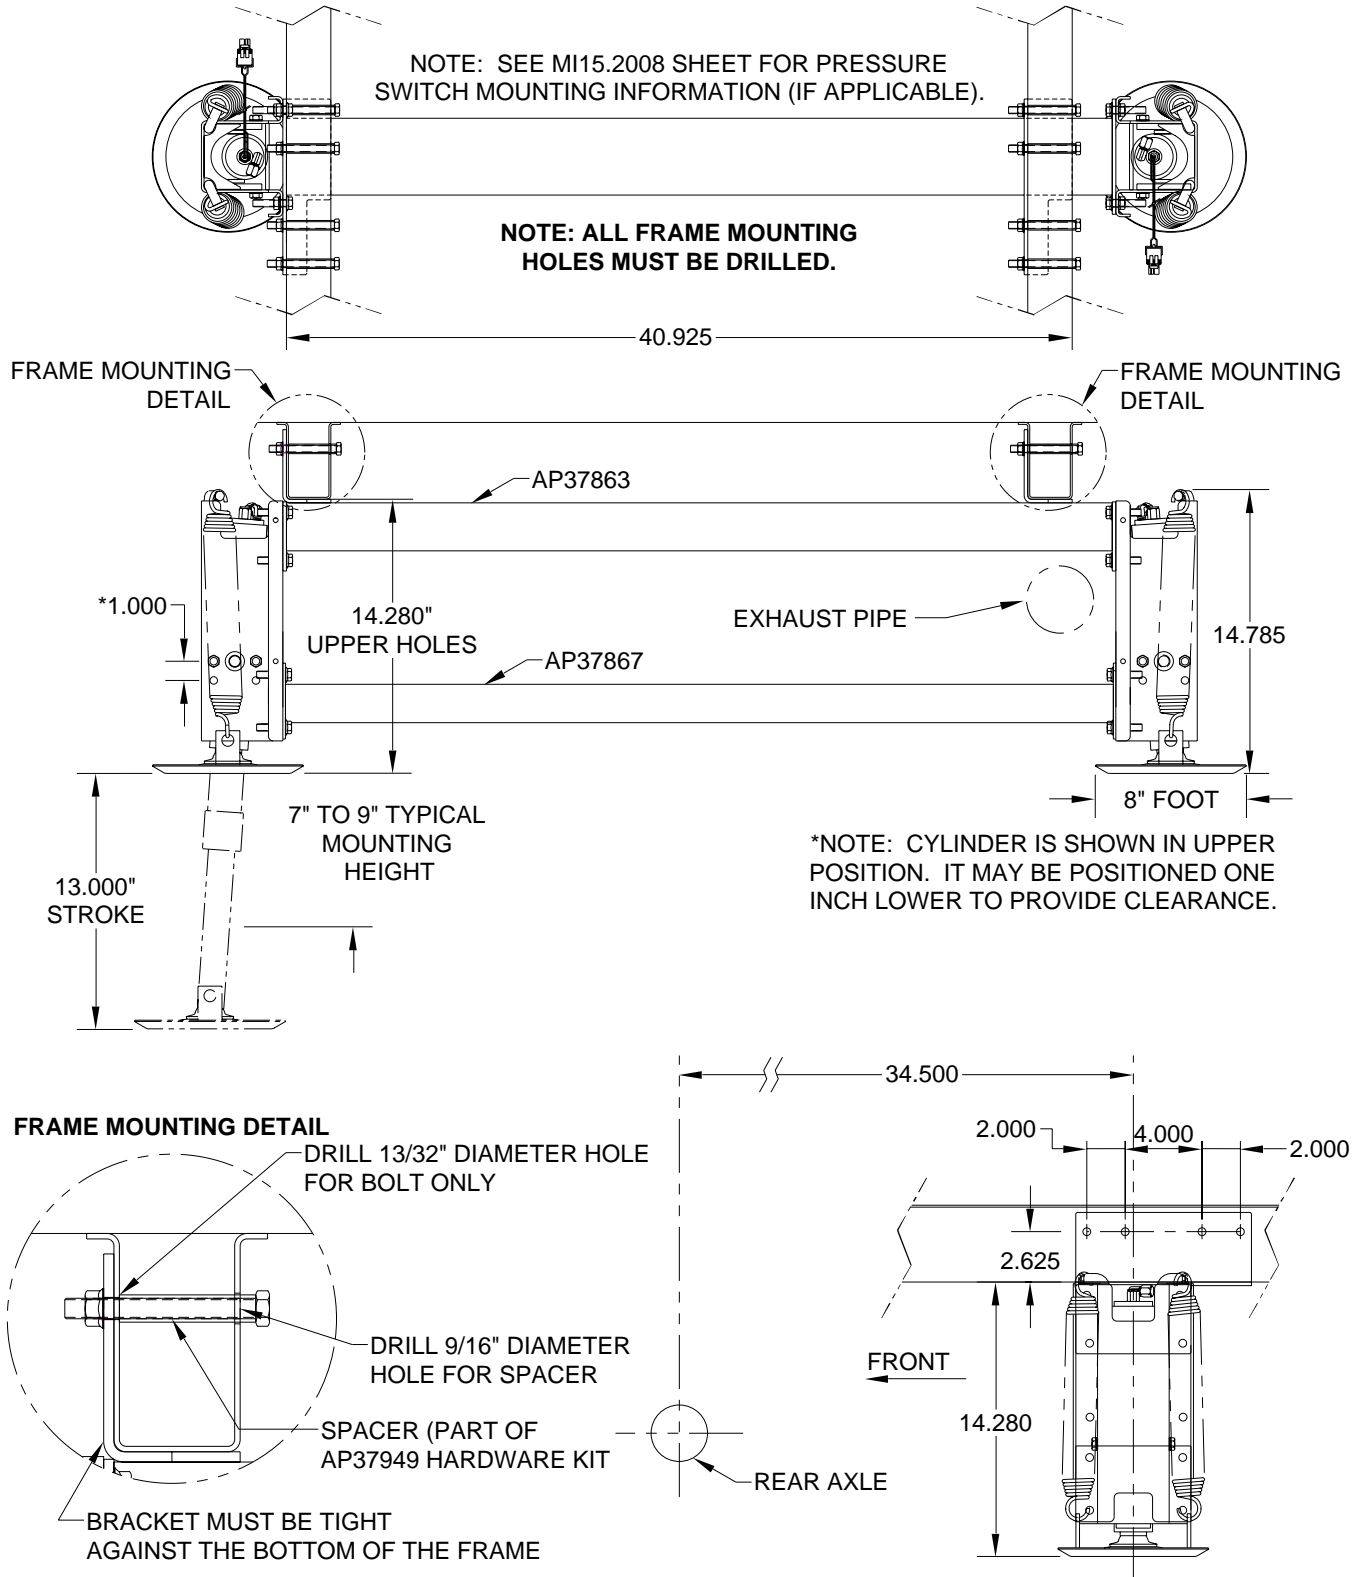

NOTE: ALL DIMENSIONS ARE APPROXIMATE

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

**MI25.1200
16OCT09**