


Bracket Kit and 9,000# Jack Kit: Straight-Acting Jacks

Application: For mounting Straight-Acting Jacks on the REAR OF FORD F53 chassis, 1997 and older, 16" TIRES with a JET AIR TAG.

Mfr. #: AP10173 Bracket Kit F53 Jet Air Tag
Includes: 1 - AP10015 Bracket/Tie Rear F53 Tag
 1 - AP10116 Hardware Kit
M.S.R.P.: See Item Price Listing

Mfr. #: AP10480 Jack Kit
Includes: 2 - AP10466 Jack 9000 x 13"
 2 - AP2043 Hardware Kit
M.S.R.P.: See Item Price Listing

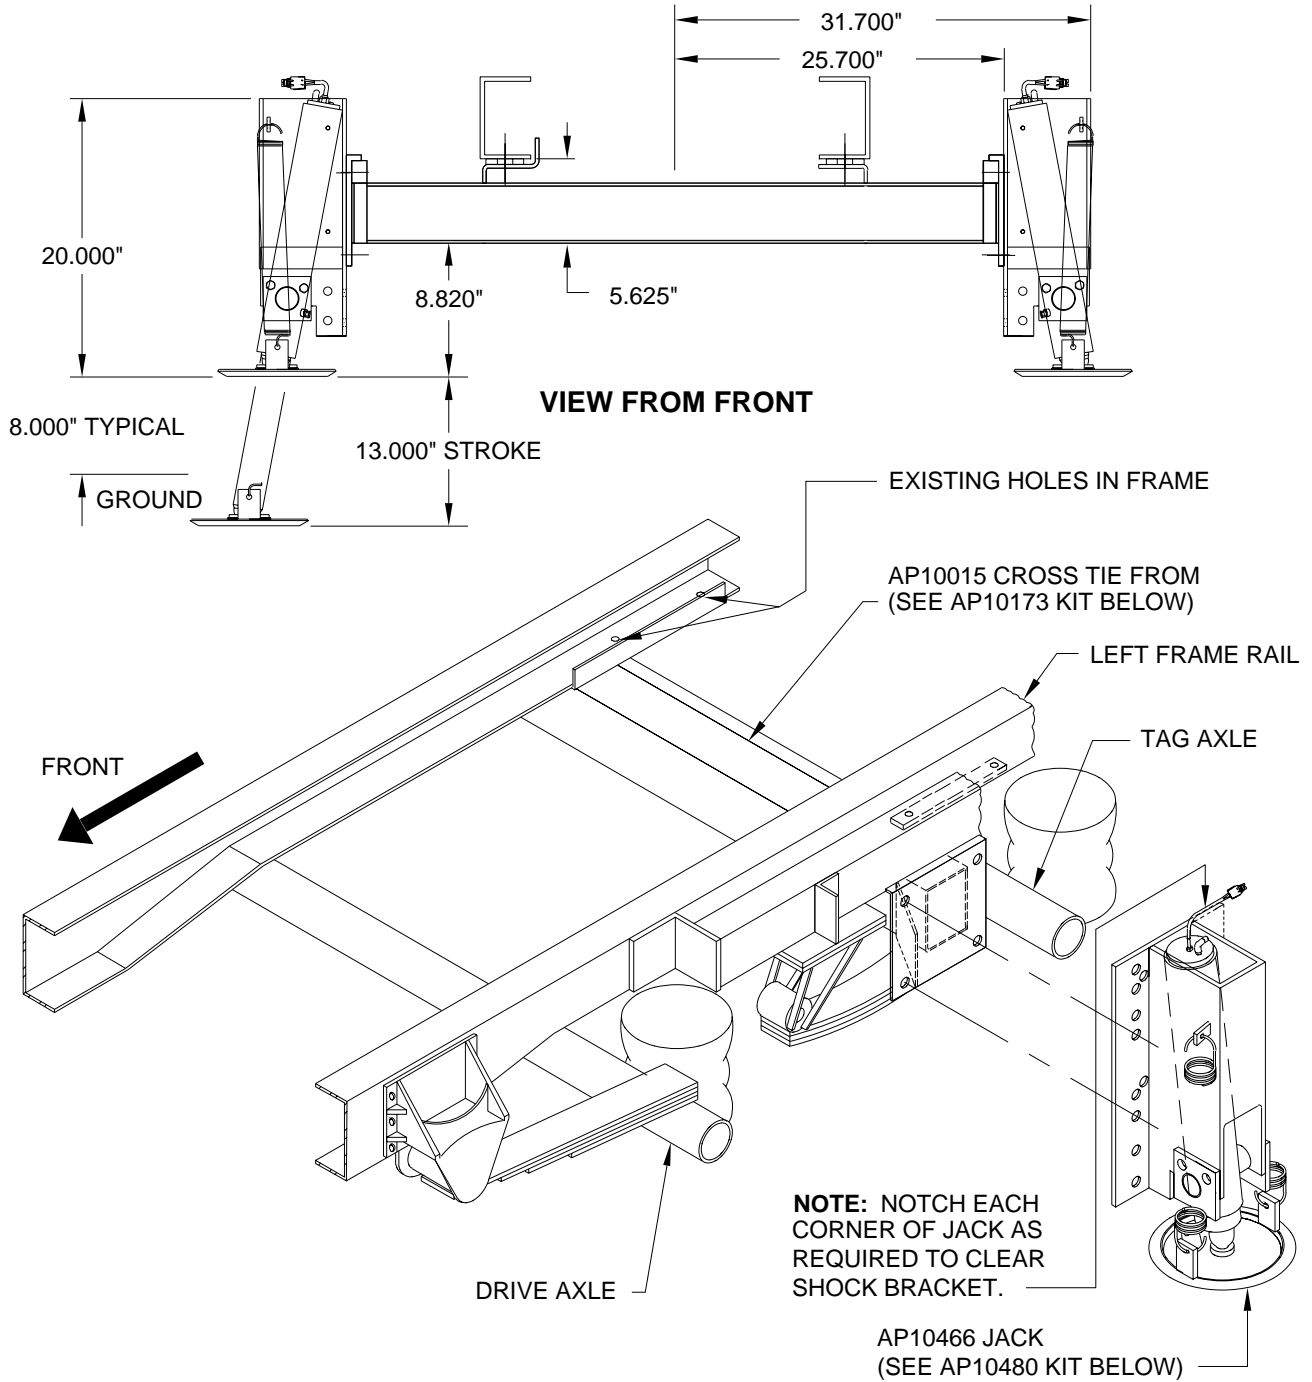

CAUTION: Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

MI25.4270
 16FEB01